






Installation Instructions

Instructions d'installation
Instrucciones de instalación

 Devices must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.


Les appareils doivent être installés par un électricien diplômé conformément à tous les codes et réglementations électriques et de construction nationaux et locaux.

Los dispositivos deben ser instalados por un electricista calificado y cumpliendo todas las normas y regulaciones, tanto nacionales como locales, sobre instalaciones eléctricas y obras.

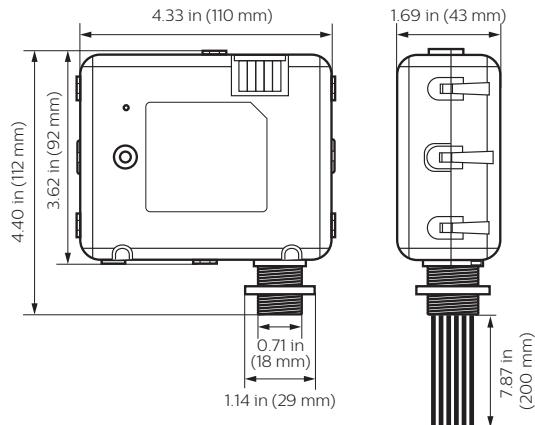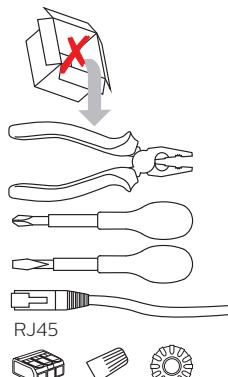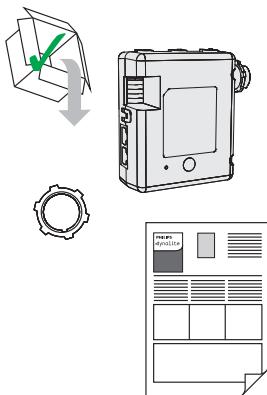


1 A

UL 2043 Plenum-rated

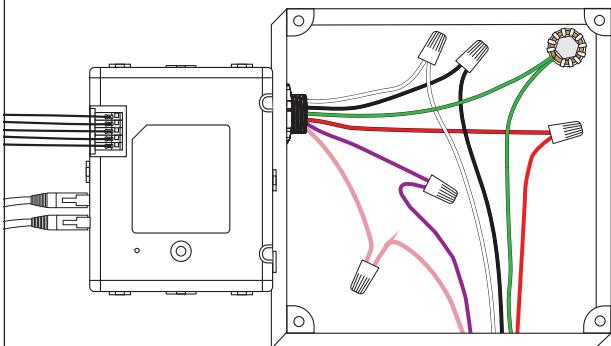


1 B

Chicago Plenum-rated

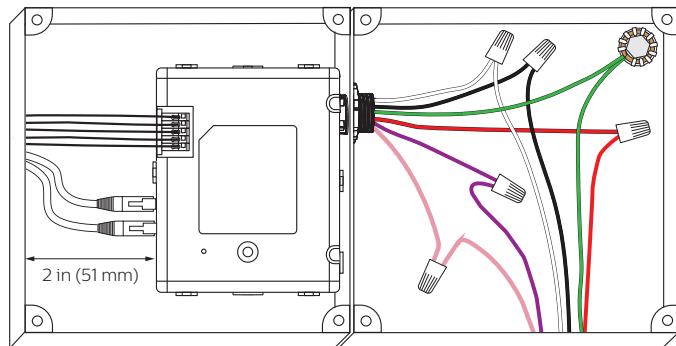

2

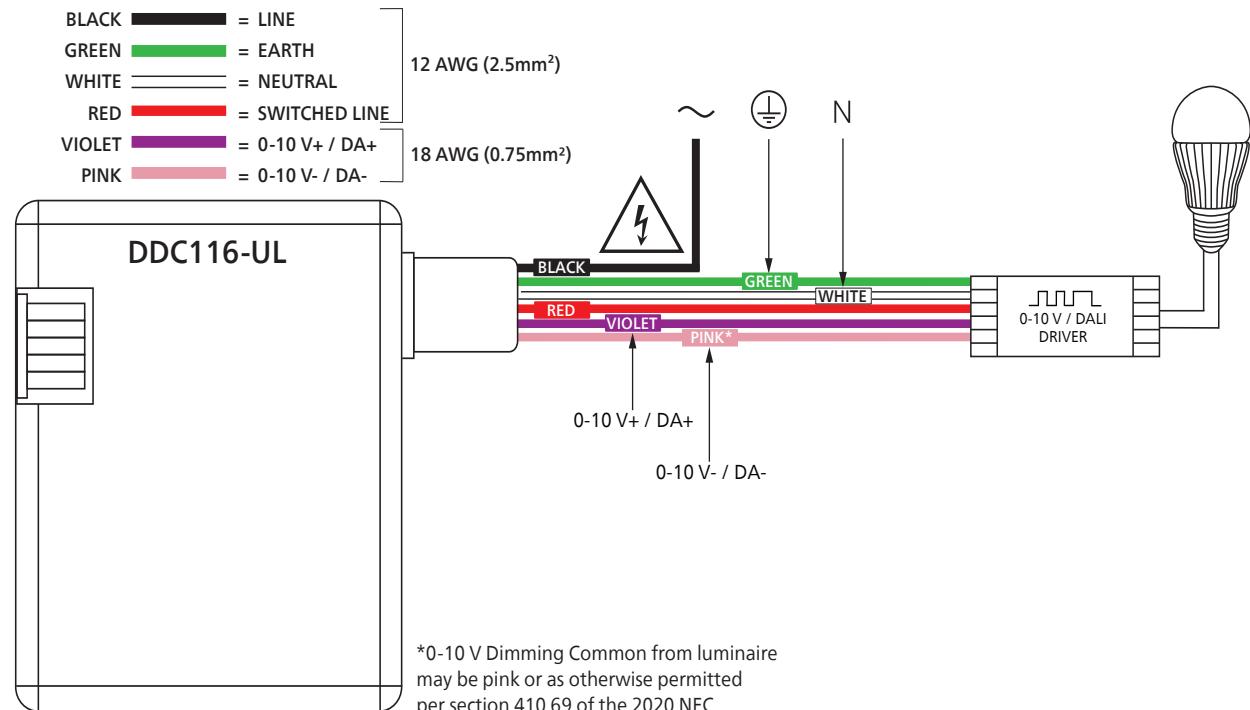

IEC Pollution Degree II

3

Output Ratings

Load Type	
<input type="checkbox"/> General Use*	20 A, 277 V \sim
<input checked="" type="checkbox"/> Electronic Driver	16 A, 277 V \sim
<input type="checkbox"/> Pilot Duty	6 A, 120 V \sim 3 A, 240 V \sim 2.6 A, 277 V \sim
<input type="checkbox"/> Motor	16 FLA (1 HP), 120 V \sim 14.5 FLA (2 1/2 HP), 240 V \sim 14.1 FLA (3 HP), 277 V \sim

Control Channel Ratings


DALI Broadcast	≤ 40 Guaranteed 100 mA Maximum 250 mA Insulation: basic
0-10 V	Sink 100 mA Source 100 mA

*Controlled receptacle (Plug load)



To avoid electrical overload, total external connected load must not exceed output rating.

4


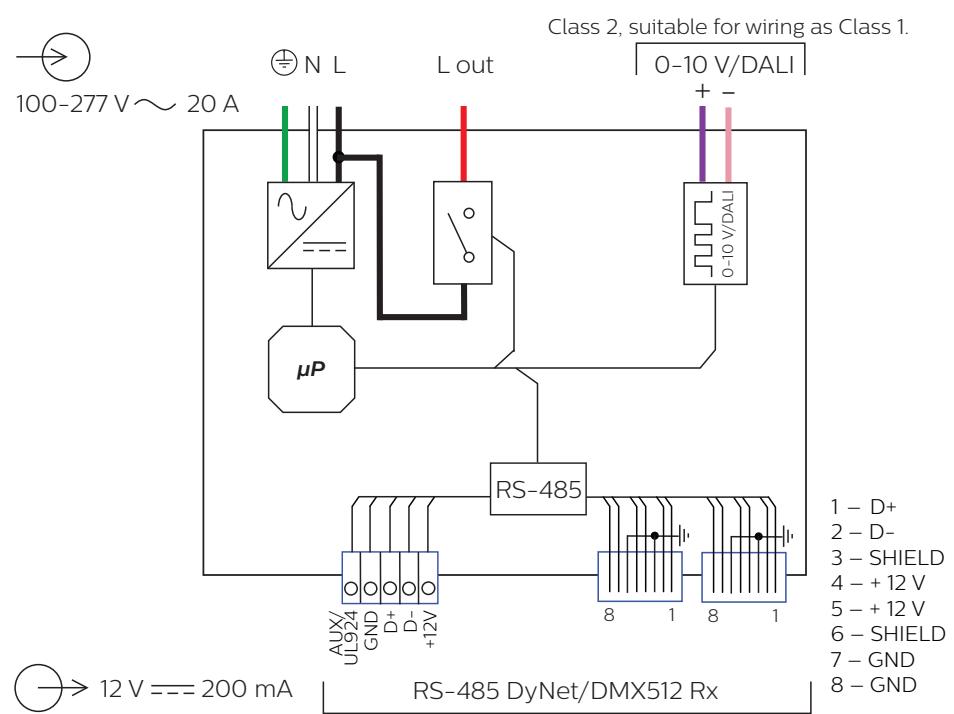


IEC Overvoltage Category III

Class 2

5

RS-485 DyNet / DMX512 and UL924

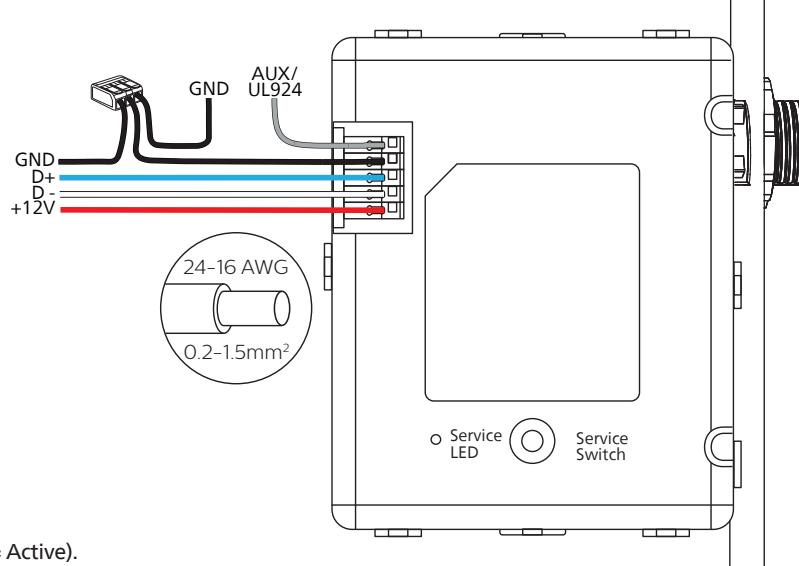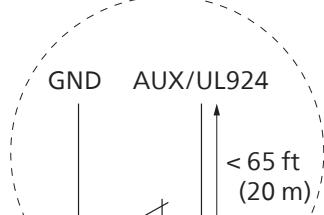

AUX/UL924 default is Normally Closed (Open = Active).




Please remove jumper wire between GND and AUX/UL924 terminals if connecting to Emergency or other system.



For DMX512, add a 120 Ohm, 0.5 W termination resistor across D+ and D- on the last DMX512 device.


6

RS-485 DyNet / DMX512

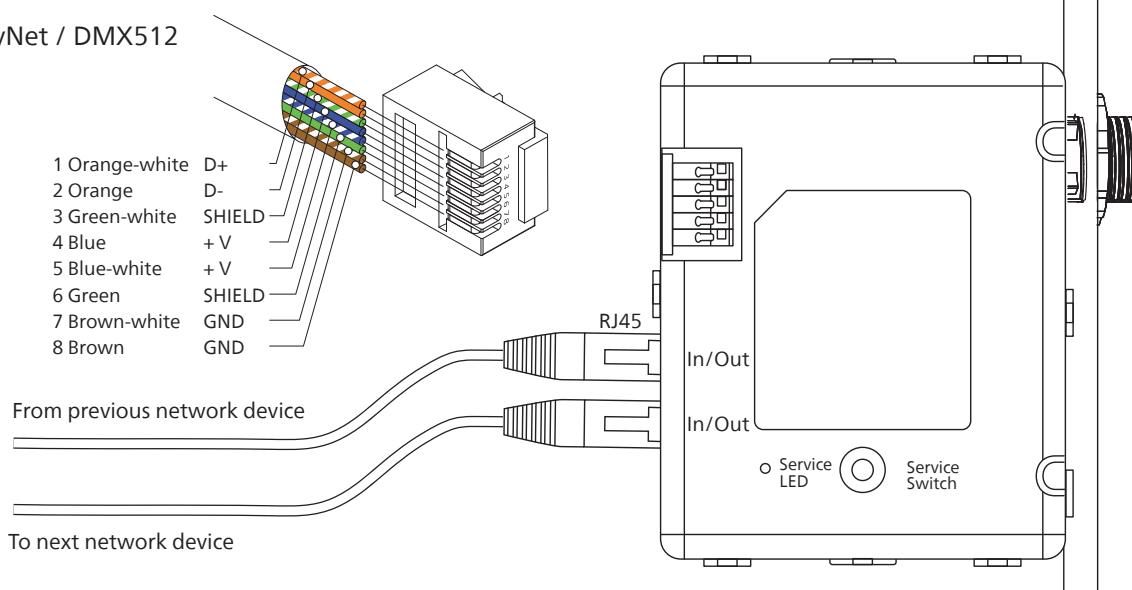


Pin numbering and color in accordance with ANSI/TIA/EIA-568 scheme T568B.

7 A

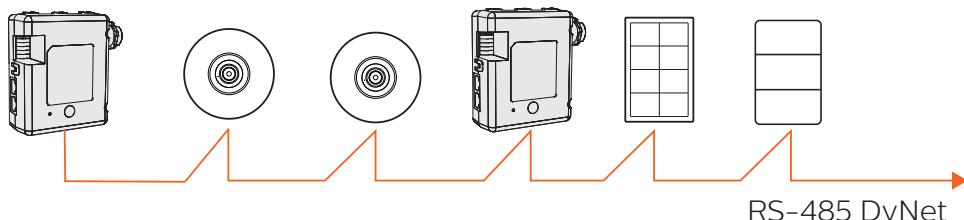

7 B

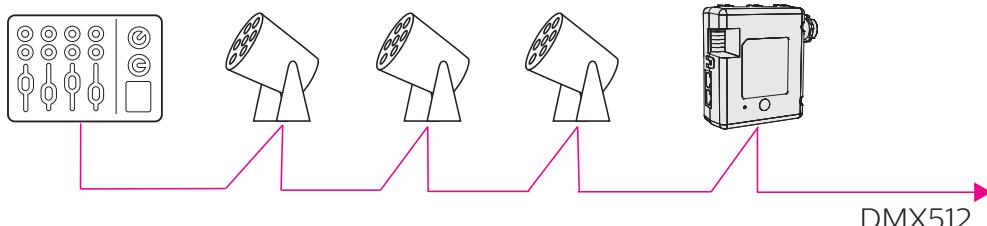


8

Service switch functions

- 1 short push – Send network ID.
- 3 short pushes – Set lights to 100%.
- 4 short pushes – **Test Mode** (LED blinking pattern changes and lights flash for 5 minutes).
 - 1 short push – Toggle control type between 0-10 V (Red LED) and DALI Broadcast (Green LED).
 - Push and hold for 4 seconds – Save control type and exit Test Mode.
- Push and hold for 4 seconds – **Program Mode** (Blue LED flash count indicates the controller zone assignment). Program Mode times out after 30 seconds of inactivity, discarding changes
 - Short push – Cycle through zone numbers (after each push, the flash count indicates the controller zone assignment).
 - Zone 1 = Screen/Presentation Zone (default).
 - Zone 2 = Generic Lighting Primary Zone.
 - Zone 3 = Generic Lighting Secondary Zone.
 - Zone 4 = Generic Lighting Primary Daylight Zone.
 - Zone 5 = Generic Lighting Secondary Daylight Zone (20% brighter).
 - Zone 6 = Plug Load Zone.
 - Push and hold for 4 seconds – Save changes and exit Program Mode. The device reboots and ready to start work.

9

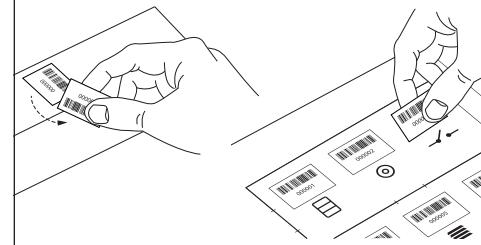

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- a) Do not use outdoors
- b) Do not use this equipment for other than the intended use.

SAVE THESE INSTRUCTIONS

⚠ Caution – 0-10 V/DALI wires may be either Class 1 or Class 2 depending on the installation and ratings of the connected devices – Class 1 applications are not SELV and should never be considered touch safe. Basic insulation or higher is required between 0-10 V/DALI wires and mains cabling as per local electrical codes.

⚠ Caution – Any modifications not approved by the manufacturer of this device could void the user's authority to operate this device.

≡ FCC and RSS-210 of IC (Industry Canada) Rules – This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and pursuant to RSS210 of the IC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any modifications not approved by the manufacturer of this device could void the user's authority to operate this device.

≡ This Class B digital apparatus complies with Canadian ICES-003: CAN ICES-3(B)/NMB-3(B). Cet appareil numerique de la Classe B est conforme a la norme NMB-003 du Canada: CAN ICES-3(B)/NMB-3(B).